



SPORT
TRAINER

1600M

OPERATING GUIDE

PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING

Hereinafter Radio Systems Corporation, Radio Systems PetSafe Europe Ltd., Radio Systems Australia Pty Ltd. and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INFORMATION

EXPLANATION OF ATTENTION WORDS AND SYMBOLS USED IN THIS GUIDE



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your dog.

⚠️ WARNING

- Not for use with aggressive dogs. Do not use this product if your dog is aggressive or if your dog is prone to aggressive behaviour. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.
- This device contains Lithium-Ion (Li-Ion) batteries; never incinerate, puncture, deform, short-circuit, or charge with an inappropriate charger. Fire, explosion, property damage, or bodily harm may occur if this warning is not followed.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of spent batteries according to the regulations in your area.
- Batteries should never be removed from the battery compartment for charging.
- Risk of explosion if batteries are charged in areas with high temperature (38° C / 100° F+).

CAUTION

Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long, or made too tight on the dog's neck may cause skin damage. This is called bed sores; it is also called decubitus ulcers or pressure necrosis.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible, reposition the collar on the dog's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the Collar Receiver; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.

For additional information on bed sores and pressure necrosis, please visit our website at www.sportdog.com.

These steps will help keep your dog safe and comfortable. Millions of dogs are comfortable while they wear stainless steel contacts. Some dogs are sensitive to contact pressure. You may find after some time that your dog is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

- You may need to trim the hair in the area of the Contact Points or switch to the longer Contact Points to ensure consistent contact. Never shave the dog's neck; this may lead to a rash or infection.
- You should not make the collar any tighter than is required for good contact. A collar that is too tight will increase the risk of pressure necrosis in the contact area.

Thank you for choosing SportDOG® Brand training products. Used properly, this product will help you track and train your dog efficiently and safely. To ensure your satisfaction, please review this Operating Guide thoroughly. If you have questions regarding this product's operation, please see this manual's Frequently Asked Questions and Troubleshooting sections or contact our Customer Care Centre. For a listing of telephone numbers in your area, visit our website at www.sportdog.com.

To get the most protection out of your warranty, please register your product within 30 days at www.sportdog.com. By registering and keeping your receipt you will enjoy the product's full warranty and, should you ever need to call the Customer Care Centre, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at www.sportdog.com.

TABLE OF CONTENTS

COMPONENTS	5
HOW THE SYSTEM WORKS	5
KEY DEFINITIONS	6
PREPARE THE REMOTE TRANSMITTER	8
PREPARE THE COLLAR RECEIVER	9
PREPARE THE REMOTE BEEPER	12
FIT THE COLLAR RECEIVER AND REMOTE BEEPER	13
FIND THE BEST INTENSITY LEVEL FOR YOUR DOG	14
CHANGE STATIC STIMULATION RANGES	15
GENERAL TRAINING TIPS	15
PROGRAM THE REMOTE TRANSMITTER	16
MATCH THE COLLAR RECEIVER, REMOTE BEEPER, AND REMOTE TRANSMITTER	19
PROGRAM THE REMOTE BEEPER	19
PROGRAM THE SYSTEM FOR TWO-DOG OPERATION	21
PROGRAM THE SYSTEM FOR THREE-DOG OPERATION	21
CHANGE ID CODES	22
ACCESSORIES	22
FREQUENTLY ASKED QUESTIONS	23
TROUBLESHOOTING	25
TEST LIGHT TOOL INSTRUCTIONS	26
TERMS OF USE AND LIMITATION OF LIABILITY	26
COMPLIANCE	27
BATTERY DISPOSAL	27
IMPORTANT RECYCLING ADVICE	28
WARRANTY	28

TRAINING GUIDE

Please visit our website at www.sportdog.com to download a detailed Training Guide for this unit or contact our Customer Care Centre for further assistance. For a listing of telephone numbers in your area, visit our website at www.sportdog.com.

COMPONENTS



HOW THE SYSTEM WORKS

The SportDOG® SportTrainer® SD-1875E Remote Trainer with Beeper has been proven safe, comfortable, and effective for all dogs over 3.6 kg. Consistent, correct use of this product allows you to reinforce commands and correct misbehaviour from 1600 m. The Remote Beeper feature provides a tone that can be heard up to 450 m, which allows you to keep track of your dog's position even when you can't see him. The Remote Transmitter controls both of these functions, providing unmatched convenience and versatility. The Remote Transmitter sends a signal, activating the Collar Receiver to deliver a harmless stimulation. With proper training, a dog will learn to associate this signal with a command. Like all SportDOG® products, this model features adjustable static stimulation levels so you can tailor the stimulation level to your dog's temperament, eliminating the risk of over-stimulation.

IMPORTANT: THE SPORTTRAINER® SD-1875E HAS A RANGE OF 1600 M. DEPENDING ON THE WAY YOU HOLD THE REMOTE TRANSMITTER, THE MAXIMUM RANGE MAY VARY. FOR CONSISTENT RESULTS AT LONGER RANGES, HOLD THE REMOTE TRANSMITTER IN A VERTICAL POSITION AWAY FROM YOUR BODY AND ABOVE YOUR HEAD. TERRAIN, WEATHER, VEGETATION, TRANSMISSION FROM OTHER RADIO DEVICES, AND OTHER FACTORS WILL AFFECT THE MAXIMUM RANGE.



⚠ WARNING

Do not use this product if your dog is aggressive or if your dog is prone to aggressive behaviour. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.

KEY DEFINITIONS

REMOTE TRANSMITTER

REMOTE TRANSMITTER: Transmits the radio signal to the Collar Receiver and Remote Beeper. It is waterproof and can be submerged in water to a depth of 7.6 m.

INTENSITY DIAL: Provides multiple levels and types of stimulation so you can match the stimulation to your dog's temperament.

TRANSMITTER INDICATOR LIGHT: Indicates that a button is pressed and also serves as a low-battery indicator.

TOGGLE SWITCH: This switch is factory-set so that the Remote Transmitter can control two Collar Receivers and two Remote Beepers.

UPPER BUTTON: This button is factory-set to deliver continuous static stimulation.

LOWER BUTTON: This button is factory-set to deliver momentary static stimulation, or a "Nick".

LOCATE BUTTON: Pressing and releasing this button produces a single beep from the Remote Beeper and disables the Remote Beeper's Run Mode.


RUN MODE BUTTON: Pressing and holding this button changes the Remote Beeper's Run Mode, which is indicated on the back of the Remote Transmitter. Pressing and releasing this button activates the Remote Beeper's Run Mode after it has been disabled by the Locate Button.

CHARGING JACK: For connecting the charger. Although the Remote Transmitter is waterproof without it, keep the cover in place when not charging to keep debris out of the opening.

RUN MODE INDICATORS: When the Run Mode Button is held, an indicator light will rotate through the Remote Beeper's three Run Mode options:

1. Silent – No beep when dog is running/Beeps once per second when dog is on point.
2. 5 Second – Beeps every 5 seconds when dog is running/Beeps once per second when dog is on point.
3. 10 Second – Beeps every 10 seconds when dog is running/Beeps once per second when dog is on point

MODE BUTTON: Depressing and releasing this button allows you the ability to change the mode of your Remote Transmitter.

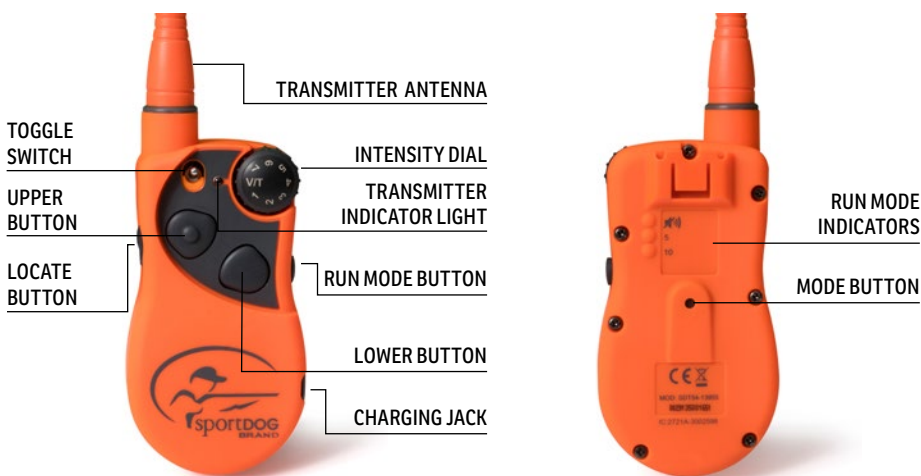

COLLAR RECEIVER

COLLAR RECEIVER: Receives the radio signal from the Remote Transmitter and delivers the static, vibration, and/or tone stimulation for correcting or cueing your dog. It is waterproof and can be submerged in water to a depth of 7.6 m.

RECEIVER INDICATOR LIGHT: Indicates when the Collar Receiver has been turned on or off, serves as a low-battery indicator, and also indicates when a continuous or momentary (nick) static stimulation button is pressed.

CONTACT POINTS: The contacts through which the Collar Receiver delivers static stimulation.

ON/OFF BUTTON: Momentarily pressing and releasing this button turns the Collar Receiver on and off.


THE COLLAR RECEIVER IS CAPABLE OF DELIVERING FOUR TYPES OF STIMULATION:

CONTINUOUS: You control both when and how long static stimulation is delivered, up to a maximum of 10 seconds. After 10 seconds, the static stimulation will "time out" and the Remote Transmitter button must be released and then pressed again before additional static stimulation can be delivered.

MOMENTARY (NICK): Static stimulation is delivered for 1/10 of a second, regardless of how long the button is pressed.

STONE: The Collar Receiver will make a rapid beeping noise when a Tone button is pressed, up to a maximum of 10 seconds.

VIBRATION: The Collar Receiver will vibrate when a Vibration button is pressed, up to a maximum of 10 seconds.

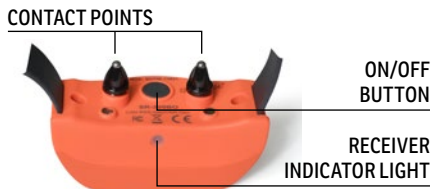

REMOTE BEEPER


REMOTE BEEPER: Receives the radio signal from the Remote Transmitter and beeps with a tone and frequency set by the user. It is waterproof and can be submerged in water to a depth of 7.6 m.

ON/OFF BUTTON: Turns the beeper on and off. The Remote Beeper's functions can be disabled from the Remote Transmitter, but the Remote Beeper should be turned off using this button when not in use to conserve battery life.

INDICATOR LIGHT: Indicates when the Remote Beeper has been turned on or off and also serves as a low-battery indicator.

BEEPER: The point at which the sound is produced.

CHARGING JACK: For connecting the charger. Although the Remote Beeper is waterproof without it, keep the cover in place when not charging to keep debris out of the opening.

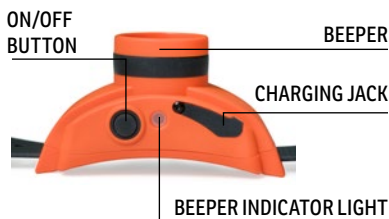

STEP::01

PREPARE THE REMOTE TRANSMITTER

CHARGE THE REMOTE TRANSMITTER

1. Lift the rubber cover protecting the Charging Jack.
2. Connect one of the charger connectors to the Charging Jack.
3. Plug the charger into a standard wall outlet.
4. Charge the Remote Transmitter for 2 hours for the first charge and every charge thereafter.

Using Lithium-Ion technology, the Remote Transmitter only requires a 2 hour charge. It is not harmful to let the unit charge for more than 2 hours.

5. When charging is complete, replace the rubber cover.

Note: Approximate battery life between charges is 40 to 60 hours, depending on frequency of use.



CHARGER
CONNECTOR
PLACED IN THE
REMOTE
TRANSMITTER
CHARGING JACK

TRANSMITTER INDICATOR LIGHT

OPERATIONAL MODE	LIGHT COLOUR	LIGHT FUNCTION	BATTERY STATUS
Continuous static, tone, or vibration stimulation, Locate, or Run Mode Button pressed	Green	Light is solid in colour while button is pressed	Good
Continuous static, tone, or vibration stimulation, Locate, or Run Mode Button pressed	Red	Light is solid in colour while button is pressed	Low
Momentary static stimulation button pressed	Green	Light flashes once and turns off	Good
Momentary static stimulation button pressed	Red	Light flashes once and turns off	Low
Unit is charging	Green	Light is solid in colour while charging	Low
Unit is fully charged (charger still connected)	Green	Light flashes once per second once the battery is completely charged	Good

STEP::02

PREPARE THE COLLAR RECEIVER

CHARGE THE COLLAR RECEIVER

1. Place Collar Receiver in Charging Cradle as shown.
2. Place the charger connector into the back of the Charging Cradle.
3. Plug the charger into a standard wall outlet.
4. Charge the Collar Receiver for 2 hours for the first charge and every charge thereafter.

Using Lithium-Ion technology, the Collar Receiver only requires a 2 hour charge. It is not harmful to let the unit charge for more than 2 hours.

Note: Approximate battery life between charges is 40 to 60 hours, depending on frequency of use.



CHARGE CRADLE INDICATOR LIGHT		
OPERATIONAL MODE	LIGHT COLOUR	LIGHT FUNCTION
No Collar Receiver on the Charging Cradle but charger is connected	Green	Light is solid in colour
Unit is charging	Red	Light is solid in colour while charging
Unit is fully charged (Collar Receiver on Charging Cradle)	Green	Light flashes once per second once the battery is completely charged

TO TURN THE COLLAR RECEIVER ON

Press and release the On/Off Button. The Receiver Indicator Light will come on and the Collar Receiver will beep 1 to 3 times depending on what static stimulation range is chosen. The default is 2 or medium.

TO TURN THE COLLAR RECEIVER OFF

Press and release the On/Off Button. The Receiver Indicator Light comes on solid (red) and the Collar Receiver beeps continuously for 2 seconds.

To extend the life between charging cycles, turn the Collar Receiver off when it is not in use.



RECEIVER INDICATOR LIGHT

OPERATIONAL MODE	LIGHT COLOUR	LIGHT FUNCTION	BATTERY STATUS	SPEAKER FUNCTION	VIBRATION
Unit is turned on via On/Off Button	Green	Light is solid in colour during beep sequence	Good	Beeps 1-3 times depending on static stimulation range setting (2 is the default setting). See page 14.	N/A
Unit is turned on via On/Off Button	Red	Light is solid in colour during beep sequence	Low		
Unit is turned off via On/Off Button	Red	Light is solid in colour during beep sequence	N/A	Beeps continuously for 2 seconds	N/A
Unit is on	Green	Light flashes every 3 seconds	Good	N/A	N/A
Unit is on	Red	Light flashes every 3 seconds	Low	N/A	N/A
Unit is delivering continuous static stimulation	Red	Light is solid in colour for as long as button is pressed	N/A	N/A	N/A
Unit is delivering momentary static stimulation	Red	Light will quickly flash once no matter how long button is pressed	N/A	N/A	N/A
Unit is delivering tone stimulation	Off	N/A	N/A	Unit will beep for as long as button is pressed (up to 10 seconds)	N/A
Unit is delivering vibration stimulation	Off	N/A	N/A	N/A	Unit will vibrate for as long as button is pressed (up to 10 seconds)

RECHARGEABLE BATTERIES

WARNING

- This device contains Lithium-Ion (Li-Ion) batteries; never incinerate, puncture, deform, short-circuit, or charge with an inappropriate charger. Fire, explosion, property damage, or bodily harm may occur if this warning is not followed.
 - Risk of explosion if battery is replaced by an incorrect type. Dispose of spent batteries according to the regulations in your area.
 - Batteries should never be removed from the battery compartment for charging.
 - Risk of explosion if batteries are charged in areas with high temperature (38° C / 100° F+).
-
- The rechargeable Lithium Ion (Li-Ion) batteries are not memory sensitive, do not require depletion before charging, and cannot be over charged.
 - The batteries come partially charged from the factory, but will require a full charge before the first use.
 - **When storing the unit for long periods, remember to regularly give batteries a full charge. This should be done once every 3 to 4 months.**
 - You should expect hundreds of recharge cycles from your batteries. However, all rechargeable batteries lose capacity over time relative to the number of recharge cycles they experience. This is normal. If your operating time drops to half of the original life, contact the Customer Care Centre to purchase a new battery.
 - The batteries should last for a period of 3-5 years. When a battery needs replacement, you can order a new pack by calling our Customer Care Centre. For a listing of telephone numbers in your area, visit our website at www.sportdog.com. Please do not open the Collar Receiver, Remote Transmitter, or Remote Beeper until you have received the replacement.

STEP::03

PREPARE THE REMOTE BEEPER

CHARGE THE REMOTE BEEPER

1. Lift the rubber cover protecting the Charging Jack.
2. Connect accessory cable to cradle and Remote Beeper.
3. Plug the charger into a standard wall outlet.
4. Charge the Remote Beeper for 2 hours for the first charge and every charge thereafter.

Using Lithium-Ion technology, the Remote Beeper only requires a 2 hour charge. It is not harmful to let the unit charge for more than 2 hours.

5. When charging is complete, replace the rubber cover.

Note: Approximate battery life between charges is 60-80 hours, depending on frequency of use.



TURN THE REMOTE BEEPER ON

Press and release the On/Off Button. The Remote Beeper Indicator Light will come on and the Remote Beeper will beep 1 time.

TURN THE REMOTE BEEPER OFF

Press and release the On/Off Button. The Remote Beeper Indicator Light will come on solid (red) and the Remote Beeper will beep for 1 second.

REMOTE BEEPER INDICATOR LIGHT

REMOTE BEEPER FUNCTION	LIGHT COLOUR	LIGHT FUNCTION	BATTERY STATUS
Unit is on	Green	Light flashes every 3 seconds	Good
Unit is on	Red	Light flashes every 3 seconds	Low
Unit is turned on via On/Off Button	Green	Light is solid in colour during beep sequence	N/A
Unit is turned off via On/Off Button	Red	Light is solid in colour during beep sequence	N/A
Unit is charging	Green	Light is solid in colour while charging	Low
Unit is fully charged (charger still connected)	Green	Light flashes once per second once the battery is completely charged	Good

STEP::04

FIT THE COLLAR RECEIVER AND REMOTE BEEPER



IMPORTANT: The proper fit and placement of the Collar Receiver is important for effective training. The Contact Points must have direct contact with your dog's skin.

CAUTION

Please see page 3 for Important Safety Information.


This system is designed so you can add or remove the Remote Beeper to or from the Collar Receiver strap as needed. The Remote Beeper can also be used on the collar strap without the Collar Receiver.

To ensure a proper fit, follow these steps:

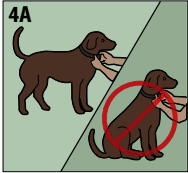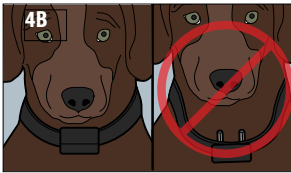1. Thread the end of the collar strap through the slot in the Remote Beeper and then through the slot on the opposite side of the Remote Beeper. Slide the Remote Beeper up the collar strap. The knob located on the bottom of the Remote Beeper can be placed in one of the collar strap holes to prevent sliding and to ensure it remains properly in place.

2. With your dog standing (4A), center the Collar Receiver so the Contact Points are underneath your dog's neck, touching the skin (4B), and the Remote Beeper is centered behind the dog's head. If your dog has a long or thick coat, you have two options to ensure consistent contact: either trim the hair around the Contact Points or switch to the longer Contact Points included with your system.


CAUTION

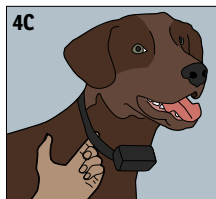- You may need to trim the hair in the area of the Contact Points. Never shave the dog's neck; this may lead to a rash or infection.
 - You should not make the collar any tighter than is required for good contact. A collar that is too tight will increase the risk of pressure necrosis in the contact area.
3. The Collar Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (4C).
 4. Allow your dog to wear the collar for several minutes and then recheck the fit. Check the fit again as your dog becomes more comfortable wearing the Collar Receiver.



STEP::05

FIND THE BEST INTENSITY LEVEL FOR YOUR DOG

The SportTrainer® SD-1875E Remote Trainer with Beeper has multiple intensity levels. This allows you to choose the static stimulation that is best for your dog.

Note: Always start at the lowest level and work your way up.

For training efficiency, it is important to find the right intensity level for your dog. This is called the "Recognition Level", and is the level at which your dog looks around in curiosity or flicks his ears.

FINDING YOUR DOG'S RECOGNITION LEVEL

Note: Every dog is different and you cannot predict where your dog's Recognition Level will be. Watch closely for any slight change in behaviour that tells you your dog is feeling the static stimulation.

1. With the Collar Receiver turned on and properly fitted to your dog, set the Remote Transmitter's Intensity Dial at Level 1 and press the Continuous Static Stimulation Button for 1 to 2 seconds.
2. If your dog shows no reaction to Level 1, go to Level 2 and repeat the process.
3. YOUR DOG SHOULD NOT VOCALIZE OR PANIC WHEN RECEIVING STATIC STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.
4. Once you find your dog's Recognition Level, this is the level you should use when you begin a training exercise.
5. If you have progressed to Level 7 while searching for your dog's Recognition Level and your dog continues to show no response, check to see if the Collar Receiver is snug against your dog's neck. Then go back to Intensity Level 1 and repeat the process. If your dog still does not indicate he is feeling the static stimulation, you have three options: trim the hair beneath the Contact Points, switch to the longer Contact Points included in your system, or change the static stimulation range (see next page).

If after completing all of these steps your dog still does not indicate he is feeling the static stimulation, please contact the Customer Care Centre.

CHANGE STATIC STIMULATION RANGES

The SportTrainer® SD-1875E Collar Receiver has 3 static stimulation ranges (low, medium and high). There are 7 static stimulation levels within each range, with 1 being the lowest and 7 being the highest. The default range setting is 2 or medium.

To change the static stimulation range, follow these steps:

1. Make sure the Collar Receiver is off.
2. Turn the unit on by pressing and releasing the On/Off button.
3. Within 5 seconds of the Indicator Light turning off, press and hold the On/Off button for 3 seconds.
4. The Collar Receiver will then beep once and the Indicator Light will flash orange. This indicates **Low** static stimulation range. If **Medium** or **High** are desired, continue to hold the On/Off button until the number of beeps/orange flashes equals the desired static stimulation range shown in the chart below.
5. Release the On/Off button once the desired range is selected; the Collar Receiver will turn off.
6. Turn the unit back on. It will then beep according to the static stimulation range selected.

	STATIC STIMULATION RANGE	DOG TEMPERAMENT
1 beep	Low	Mild
2 beeps	Medium	Moderate
3 beeps	High	Stubborn

GENERAL TRAINING TIPS

BEFORE TRAINING YOUR DOG WITH THIS PRODUCT

You will have the most success using this Remote Trainer if you always remember to teach a command before trying to reinforce the command with stimulation. Always keep the following training tips in mind:

- Eliminate one misbehaviour or teach one obedience command at a time. If you move too fast with the training, your dog may become confused.
- Be consistent. Give your dog a static, tone, or vibration stimulation with each misbehaviour.
- Do not overcorrect your dog. Use as few stimulations as possible to train your dog.
- Restrict your dog from situations in which he has a history of misbehaving unless you can supervise him and use the Remote Trainer for applying static, tone, or vibration stimulation.
- If you notice one situation in which your dog misbehaves repeatedly, set up this situation as a training session. This will dramatically increase your chances of success.
- If your dog has a timid reaction to the static, tone, or vibration stimulation (especially the first couple of times), do not be alarmed. Redirect his attention to a simple and appropriate behaviour (i.e. a known command, such as "Sit").
- Never use the SportTrainer® SD-1875E Remote Trainer to correct or eliminate any form of aggressive behaviour. If your dog exhibits such behaviour, contact a professional trainer. Aggression in dogs is the result of many factors – it may be a learned behaviour or it may be brought on as a result of fear. Another factor contributing to aggression in dogs is social dominance. Every dog is different.

Visit our website at www.sportdog.com to find more detailed training tips and guides or contact our Customer Care Centre for further assistance. For a listing of telephone numbers in your area, visit our website at www.sportdog.com

At this point, your SD-1875E Remote Trainer is ready to use. The Remote Transmitter is factory set to mode 1 and the Toggle Switch **UP** position, but you may wish to change the mode to fit your situation. See **STEP::06** for an explanation of mode options.

STEP::06

PROGRAM THE REMOTE TRANSMITTER

The SportTrainer® SD-1875E Remote Transmitter has 12 operational modes to allow you to select the best match for your type or style of training. The Remote Transmitter is factory set to mode 1 and the Toggle Switch **UP** position. There are also two programming modes: Mode 7 (Change Tones) and Mode V/T (Change ID Codes).



TO CHANGE THE MODE

1. Refer to the following tables for descriptions of all modes.
2. For modes 1 – 6 in the Toggle Switch **UP** position, select the desired mode on the Intensity Dial. Or for modes 1 – 6 in the Toggle Switch **DOWN** position, select the desired mode on the Intensity Dial. For example, if mode 5 is desired, in either the Toggle Switch **UP** or Toggle Switch **DOWN** position, set the Intensity Dial to level 5.
3. Turn the Remote Transmitter over.
4. Using a pen or the tine of a buckle, depress and release the Mode Button. When pressed, the Transmitter Indicator Light will be solid in colour. When it is released, the Indicator Light will flash the number of times for the mode selected. For example, mode 5 would flash 5 times.

Note: For two-dog operation setup refer to [STEP::09](#). For three-dog operation setup refer to [STEP::10](#).

TOGGLE SWITCH IN THE UP POSITION

MODE	UPPER BUTTON FUNCTION	LOWER BUTTON FUNCTION	LEFT-SIDE BUTTON FUNCTION	RIGHT-SIDE BUTTON FUNCTION	TOGGLE SWITCH FUNCTION	V/T FUNCTION
1	HIGH Continuous static stimulation*	HIGH Momentary (nick) static stimulation*	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Tone
2	HIGH Continuous static stimulation*	Tone stimulation	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Vibration
3	MEDIUM Continuous static stimulation*†	LOW Continuous static stimulation*†	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Tone
4	HIGH Continuous static stimulation*	No function	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Tone
5		Dog 2	Dog 3	No function	Up: Continuous* Down: Call/Locate**/Run Mode***	Tone
6	HIGH Continuous static stimulation*	HIGH +2 Intensity Continuous static stimulation*	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Tone
7 (Change tones)	Dog 1 See STEP::08	Dog 2 See STEP::08	Dog 3 See STEP::08	No function	Up position	No function
V/T (ID CODE)	No function	No function	See STEP::11	No function	Up position	No function

*Static stimulation levels set by intensity dial

**Call/Locate Mode turns off Run Mode

***To enable Run Mode, press and hold the corresponding Locate Button for 3 seconds

†Mode 3 provides more static stimulation “increments” to choose from – a total of 14 levels of static stimulation. For example, in mode 3, with the Intensity Dial set at 2, the lower button provides level 3 static stimulation and the upper button provides level 4 static stimulation.

TOGGLE SWITCH IN THE DOWN POSITION

MODE	UPPER BUTTON FUNCTION	LOWER BUTTON FUNCTION	LEFT-SIDE BUTTON FUNCTION	RIGHT-SIDE BUTTON FUNCTION	TOGGLE SWITCH FUNCTION	V/T FUNCTION
1	HIGH Continuous static stimulation*	HIGH Momentary (nick) static stimulation*	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Vibration
2	HIGH Continuous static stimulation*	Vibration stimulation	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Tone
3	MEDIUM Continuous static stimulation*†	LOW Continuous static stimulation*†	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Vibration
4	HIGH Continuous static stimulation*	No function	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Vibration
5	Dog 1	Dog 2	Dog 3	No function	Up: Continuous* Down: Call/Locate**/Run Mode***	Vibration
6	HIGH Continuous static stimulation*	HIGH +2 Intensity Continuous static stimulation*	Call/Locate Mode – single tone**	Run Mode	Up: Dog 1 Down: Dog 2	Vibration

*Static stimulation levels set by intensity dial

**Call/Locate Mode turns off Run Mode

***To enable Run Mode, press and hold the corresponding Locate Button for 3 seconds

†Mode 3 provides more static stimulation “increments” to choose from – a total of 14 levels of static stimulation. For example, in mode 3, with the Intensity Dial set at 2, the lower button provides level 3 static stimulation and the upper button provides level 4 static stimulation.

STEP::07

MATCH THE COLLAR RECEIVER, REMOTE BEEPER, AND REMOTE TRANSMITTER

To match the Collar Receiver and Remote Beeper to work with a new Remote Transmitter or to program a new Collar Receiver and Remote Beeper to work with your existing Remote Transmitter:

1. Turn the Collar Receiver and Remote Beeper off.
2. Press and hold the On/Off Button for each. The Collar Receiver and Remote Beeper Indicator Lights will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Collar Receiver and Remote Beeper Indicator Lights will begin flashing as normal. If this occurs, start over from 1.
3. After the Collar Receiver and Remote Beeper Indicator Lights have turned off, release the On/Off Button.
4. Press and hold the Upper Button on the Remote Transmitter until the Collar Receiver and Remote Beeper Indicator Lights flash 5 times. Once the Collar Receiver and Remote Beeper Indicator Lights have flashed 5 times, the Collar Receiver and Remote Beeper have been matched and the Indicator Lights will begin flashing as normal. If the Collar Receiver and Remote Beeper Indicator Lights do not flash 5 times, start over from 1.

STEP::08

PROGRAM THE REMOTE BEEPER

CHANGE TONES

The SportTrainer® SD-1875E Remote Beeper has nine tones. The default tone is High Volume Beep. **The Remote Beeper must be matched to the Remote Transmitter to change the tone settings remotely.** See [STEP::07](#).

MODE	STONE
1	High Volume Beep
2	Double High Beep
3	High Falling To Low Volume Beep
4	Double High Falling To Low Volume Beep
5	Low Volume Hawk
6	High Volume Hawk
7	Bob White Quail Call
8	Triple Beep
9	Low Volume Beep

TO CHANGE THE TONE

1. While the Remote Beeper is on, set the Intensity Dial on the Remote Transmitter to position 7 with the Toggle Switch in the **UP** position.
2. Press the Mode Button on the back of the Remote Transmitter. The Remote Transmitter LED will illuminate green.
3. Press the Upper Button on the Remote Transmitter for Dog 1. The Remote Beeper will start cycling through the tones by playing them one at a time.
4. Once you have heard the tone you want, press the Upper Button for Dog 1 again on the Remote Transmitter to select that tone. The Remote Beeper will emit 3 beeps to confirm that you selected a tone.
5. You do have the ability to select a different tone for each dog. For Dog 2, follow steps 1-4 using the Lower Button in place of the Upper Button. For Dog 3, follow steps 1-4 using the Locate Button in place of the Upper Button.
6. Turn the Intensity Dial one position. The Remote Transmitter's Indicator Light will turn off.
7. Press the corresponding button for each dog (with the toggle switch in the up position) and the selected tone will play.

CHANGE RUN MODE

The Run Mode is changed using the Run Mode Button on the Remote Transmitter. You have three choices of how often the beeper sounds when your dog is moving: Never (Silent Mode), every 5 seconds (5 Second Mode), or every 10 seconds (10 Second Mode). In all modes, the Remote Beeper beeps once per second when the dog stops moving.

1. Press and hold the Run Mode Button while viewing the back of the Remote Transmitter.
2. After 2 to 3 seconds, an indicator light next to the current Run Mode will light up.
3. Continue holding the Run Mode Button until the indicator light for the desired mode lights up.
4. Release the Run Mode Button. The Indicator Light next to the corresponding mode will flash several times indicating the new Run Mode is set.

Note: If you would like different Run Modes for each dog in 3-Dog operation, follow the instructions below to manually configure each of their Remote Beeper's.

LOCATING YOUR DOG IN THE FIELD

Anytime your dog is within 1600 m, you can make the Remote Beeper beep by pressing the Locate Button on the Remote Transmitter. The Remote Beeper will beep once each time you press the button. Pressing the Locate Button disables the Remote Beeper's Run Mode, but Run Mode is still on. To reactivate the Run Mode, press and release the Remote Transmitter's Run Mode Button. The Remote Beeper will emit 3 beeps to confirm Run Mode has been activated and will continue operating in the Last Run Mode in which it was set.

MANUALLY CONFIGURE THE REMOTE BEEPER

The Remote Beeper can be remotely programmed from the Remote Transmitter, or you can program tone and Run Mode from the beeper itself.

1. Turn the Remote Beeper off.
2. Press and release the On/Off button to turn on the Remote Beeper.
3. Within 5 seconds press and hold the On/Off button. The Remote Beeper will begin to cycle through the 9 available tones.
4. When the desired tone is heard, release the On/Off button before the next tone starts. Tone is now set.
5. Press and hold the On/Off button immediately following tone selection completion until the number of beeps matches the desired Run Mode as shown in the chart.

1 Beep (Silent Mode)	No beep when dog is running/Beeps once per second when dog is on point
2 Beeps (5 Second Mode)	Beeps every 5 seconds when dog is running/Beeps once per second when dog is on point
3 Beeps (10 Second Mode)	Beeps every 10 seconds when dog is running/Beeps once per second when dog is on point

6. Release the On/Off button after the corresponding number of beeps matches your desired Run Mode

STEP::09

PROGRAM THE SYSTEM FOR TWO-DOG OPERATION

SportDOG® Collar Receivers and Remote Beeper can be set to respond to either the up or down Toggle Switch position. A SportDOG® Add-A-Dog® Extra Collar Receiver with Remote Beeper must be purchased to train and locate a second dog in two-dog mode. **Please refer to the last page for the compatible Add-A-Dog® Collar Receiver with Remote Beeper for this system.**

1. Program the Remote Transmitter to modes 1 – 6 in either the Toggle Switch **UP** or Toggle Switch **DOWN** position (see [STEP::06](#)).
2. Flip the toggle switch to the **UP** position.
3. Program the first Collar Receiver and Remote Beeper:
 - A. Turn the Collar Receiver and Remote Beeper off.
 - B. Press and hold the On/Off Button for each. The Collar Receiver and Remote Beeper Indicator Lights will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Collar Receiver and Remote Beeper Indicator Lights will begin their normal flashing. If this occurs, start over from **A**.
 - C. After the Collar Receiver and Remote Beeper Indicator Lights have turned off, release the On/Off Button.
 - D. Press and hold the Upper Button on the Remote Transmitter until the Collar Receiver and Remote Beeper Indicator Lights flash 5 times. If the Collar Receiver and Remote Beeper Indicator Lights do not flash 5 times, start over from **A**.
4. Program the second Collar Receiver and Remote Beeper the same way using **A** through **D** above, but with the toggle switch in the down position.

TOGGLE SET TO UP FOR DOG 1 OR TOGGLE SET TO DOWN FOR DOG 2



STEP::10

PROGRAM THE SYSTEM FOR THREE-DOG OPERATION

SportDOG® Add-A-Dog® Collar Receivers with Remote Beeper must be purchased to train and locate additional dogs. **Please refer to the back cover for the compatible Add-A-Dog® Collar Receiver with Remote Beeper for this system.**

1. Program the Remote Transmitter to mode 5 in either the Toggle Switch **UP** or the Toggle Switch **DOWN** position (see [STEP::06](#)).
2. Flip the toggle switch to the **UP** position.
3. Program the first Collar Receiver and Remote Beeper:
 - A. Turn the Collar Receiver and Remote Beeper off.
 - B. Press and hold the On/Off Button for each. The Collar Receiver and Remote Beeper Indicator Lights will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Collar Receiver and Remote Beeper Indicator Lights will begin their normal flashing. If this occurs, start over from **A**.
 - C. After the Collar Receiver and Remote Beeper Indicator Lights have turned off, release the On/Off Button.
 - D. Press and hold the **UPPER BUTTON** on the Remote Transmitter until the Collar Receiver and Remote Beeper Indicator Lights flash 5 times. If the Collar Receiver and Remote Beeper Indicator Lights do not flash 5 times, start over from **A**.
4. Program the second Collar Receiver and Remote Beeper using **A** through **D** above, but using the **LOWER BUTTON** in place of the Upper Button.
5. Program the third Collar Receiver and Remote Beeper using **A** through **D** above, but using the **LEFT-SIDE BUTTON** in place of the Upper Button.

STEP::11

CHANGE ID CODES

An ID Code is the signal identification between the Remote Transmitter and Collar Receiver. Each is programmed in 1 of 2,000 ID Codes from the factory. The SportTrainer® SD-1875E has the flexibility to program two or more Remote Transmitters to the same ID Code allowing them to both control one Collar Receiver. There are 64 programmable ID Codes available.

TO MANUALLY PROGRAM A REMOTE TRANSMITTER'S ID CODE

1. Turn the Intensity Dial to V/T, flip the Toggle Switch to the **UP** position, and then press and release the Mode Button on the back of your Remote Transmitter. This does not change the mode, so the current mode will still be active after the ID change is complete.
2. Once the Mode Button is released, the green Indicator Light will illuminate and stay on for 15 seconds.
3. While the green light is on, turn the Intensity Dial to select the 1st digit of the ID and then press and release the Left-Side Button. The green light will flash rapidly confirming selection.
4. Again, while the green light is on, turn the Intensity Dial to select the 2nd digit of the ID and then press and release the Left-Side Button. The green light will flash rapidly confirming selection. The 2nd digit is optional and, if not desired, wait until the green light turns off and refrain from pressing the Left-Side Button.
5. At the end of 15 seconds, or after the second press of the Left-Side Button, the green light will turn off and the ID of the unit will be updated. At this point, the unit will be in the same mode it was in prior to setting the ID.
6. Upon changing the ID Code, you will need to match the Collar Receiver and Remote Beeper to the Remote Transmitter (see [STEP::07](#)).

Note: If you press the Left-Side Button only once (skipping step 4) the ID is still a two digit ID. The left digit is defaulted to 1. For example, if you selected 6 in step 3 and pressed the Left-Side Button only once, the Programmed ID will be 16.

TO RETURN THE UNIT TO THE FACTORY ID

1. Turn the Intensity Dial to V/T, flip the Toggle Switch to the **UP** position, and then press and release the Mode Button on the back of your Remote Transmitter. This does not change the mode, so the current mode will still be active after the ID change is complete.
2. Once the Mode Button is released, the green Indicator Light will illuminate and stay on for 15 seconds.
3. Do not press any buttons and wait until the green Indicator Light turns off.
4. You will now need to match the Collar Receiver and Remote Beeper to the Remote Transmitter (see [STEP::07](#)).

ACCESSORIES

To purchase additional accessories for your SportDOG® Brand SportTrainer® SD-1875E Remote Trainer with Beeper, contact the Customer Care Centre or visit our website at www.sportdog.com to locate a retailer near you.

FREQUENTLY ASKED QUESTIONS

<p>Is the static stimulation safe for my dog?</p>	<p>While Continuous and/or Momentary static stimulation may be unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.</p>
<p>How old does a dog have to be before using the SportTrainer® SD-1875E?</p>	<p>Your dog should be able to learn basic obedience commands such as "Sit" or "Stay". The Collar Receiver may be too large for dogs under 3.6 kg. The system should only be used with dogs over 6 months of age. If your dog is injured or its mobility is otherwise impaired, contact your veterinarian or professional trainer before use.</p>
<p>Once my dog is trained and has been obeying my commands, will my dog have to continue to wear the Collar Receiver?</p>	<p>Your dog may need to wear the Collar Receiver from time to time for reinforcement. Also, many hunters keep the Collar Receiver on their dogs while hunting for maximum control.</p>
<p>Is the Collar Receiver waterproof?</p>	<p>Yes. If the rechargeable battery pack ever needs to be replaced, make sure the o-ring and o-ring groove are free from dirt and debris.</p>
<p>Can my Collar Receiver be used around salt water?</p>	<p>Yes. However, if the Collar Receiver is used in or around salt water, it should be rinsed with fresh water following each use.</p>
<p>Can I use the SportTrainer® SD-1875E with more than one dog?</p>	<p>Yes. The SportTrainer® SD-1875E is expandable to a maximum of 3 dogs. SportDOG® Add-A-Dog® Collar Receivers must be purchased. Please refer to the last page for a list of compatible Collar Receivers.</p>
<p>Can I use the SportTrainer® SD-1875E on aggressive dogs?</p>	<p>We do not recommend any of our products to be used on aggressive dogs. We recommend you contact your local veterinarian or professional trainer to determine if your dog might be aggressive.</p>
<p>Will I get exactly 1600 m of range with the SportTrainer® SD-1875E?</p>	<p>The range you get with your SportTrainer® SD-1875E will vary according to terrain, weather, and vegetation as well as transmission from other radio devices. To get the maximum amount of range, please refer to "HOW THE SYSTEM WORKS" section of this guide.</p>
<p>How long can I continuously deliver stimulation to my dog?</p>	<p>The maximum amount of time you can press the Continuous Static Stimulation Button and deliver static stimulation to your dog continuously is 10 seconds. The maximum amount of time you can press the Vibration Button and deliver vibration stimulation continuously is 10 seconds. The maximum amount of time you can press the Tone Button and deliver tone stimulation continuously is 10 seconds. After 10 seconds, the stimulation will "time out" and the Remote Transmitter button needs to be released and then pressed again before additional stimulation can be delivered.</p>
<p>What do I do if my dog's neck becomes red and irritated?</p>	<p>This condition is due to the Contact Points irritating the skin. Discontinue use of the Collar Receiver for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, resume use and monitor the skin condition closely.</p>
<p>The Intensity Dial seems difficult to rotate. Is this normal?</p>	<p>Yes. This prevents accidental changes in intensity and encourages an optimal waterproof seal. The knob will "break in" and be slightly easier to turn as you use it.</p>
<p>Can I attach a lead to the SportTrainer® SD-1875E Collar Receiver?</p>	<p>DO NOT attach a lead to the Collar Receiver. You may put a separate non-metallic collar on your dog's neck and attach a lead. Be sure the extra collar does not interfere with the Contact Points.</p>
<p>Can I program my SportTrainer® SD-1875E to work with my other SportDOG® brand systems?</p>	<p>The SportTrainer® SD-1875E will work with SD-1825, SD-1825CAMO, and SD-1825E systems.</p>

FREQUENTLY ASKED QUESTIONS

Can I use the Remote Beeper by itself?	Yes. The Remote Beeper can be used independently without the Collar Receiver. However, it is recommended to have a counter weight, like the Collar Receiver, in order to keep the Remote Beeper on top of the dog's neck.
How do I get back into Run Mode if I have pressed the Locate Button on my Remote Transmitter?	Simply press the Remote Transmitter's Run Mode Button. The Remote Beeper will continue operating in the last Run Mode in which it was set.
My Remote Transmitter is sending a signal to more than one Collar Receiver unintentionally, what should I do?	In the rare event this occurs, you can change your Remote Transmitter's ID Code. See the " CHANGE ID CODES " section to solve this issue.

TROUBLESHOOTING


The answers to these questions should help you solve any problem you have with this system. If they do not, please contact the Customer Care Centre or visit our website at www.sportdog.com.

My dog is not responding when I press a button.	<ul style="list-style-type: none">• Check to see if the Collar Receiver and Remote Beeper have been turned on and the Indicator Lights are flashing.• If your range has reduced from the first time you have used it, please check to see if the battery is low in either the Remote Beeper, Remote Transmitter, or Collar Receiver.• Many factors can impact the range you have with the SportTrainer® SD-1875E. For a list of these factors, please refer to "HOW THE SYSTEM WORKS".• You can verify the Collar Receiver is delivering stimulation to your dog by placing the test Light tool, enclosed in your kit, on the Collar Receiver. Please refer to the "TEST LIGHT TOOL INSTRUCTIONS" section for details.• Increase the Intensity Dial. Refer to "FIND THE BEST INTENSITY LEVEL FOR YOUR DOG" for more information.• Increase the Static Stimulation Range. Refer to "CHANGE STATIC STIMULATION RANGES" for more information.• Make sure the Collar Receiver's Contact Points are placed snugly against your dog's skin. Refer to "FIT THE COLLAR RECEIVER AND REMOTE BEEPER" for more information.• You may need to switch to the longer Contact Points included with your system or trim the hair beneath the Contact Points.• If you notice your operating time is significantly reduced from the original time, your Collar Receiver or Remote Beeper battery needs to be replaced. Contact the Customer Care Centre to purchase a new one.
The Collar Receiver will not turn on.	<ul style="list-style-type: none">• Make sure the Collar Receiver has been charged. The Collar Receiver will charge in 2 hours.
The Collar Receiver is not responding to the Remote Transmitter.	<ul style="list-style-type: none">• Verify the Collar Receiver has been turned on and the Indicator Light is flashing. Refer to "TO TURN THE COLLAR RECEIVER ON".• Refer to "MATCH THE COLLAR RECEIVER, REMOTE BEEPER, AND REMOTE TRANSMITTER".
My Remote Beeper does not beep when the dog is moving or when he is on point.	<ul style="list-style-type: none">• Check to see if the Remote Beeper has been turned on and the Indicator Light is flashing.• If the Locate button was pressed, then the Remote Beeper's Run Mode was disabled.• To enable the Remote Beeper's Run Mode, press the Remote Transmitter's Run Mode Button. The Remote Beeper will emit 3 beeps to confirm Run Mode has been reactivated.
The Remote Beeper is not responding to the Remote Transmitter.	<ul style="list-style-type: none">• Verify the Remote Beeper has been turned on and the Indicator Light is flashing. Refer to "TO TURN THE COLLAR RECEIVER ON".• Refer to "MATCH THE COLLAR RECEIVER, REMOTE BEEPER, AND REMOTE TRANSMITTER".
My Remote Beeper cannot be matched.	<ul style="list-style-type: none">• Verify the Remote Beeper has been turned on and the Indicator Light is flashing. Refer to "TURN THE REMOTE BEEPER ON".• Refer to "MATCH THE COLLAR RECEIVER, REMOTE BEEPER, AND REMOTE TRANSMITTER".

TEST LIGHT TOOL INSTRUCTIONS

1. Turn the Collar Receiver on.
 2. Hold the Test Light Tool Contacts to the Contact Points.
 3. Press a Stimulation Button on the Remote Transmitter.
 4. The Test Light will flash.
Note: At higher Stimulation Levels, the Test Light will flash brighter.
 5. Turn the Collar Receiver off.
- Save the Test Light Tool for future testing.

Note: If the Test Light does not flash, recharge the battery and re-test. If the Test Light still does not flash, contact the Customer Care Centre.

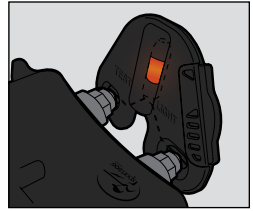

TERMS OF USE AND LIMITATION OF LIABILITY

1. Terms of Use

Use of this Product is subject to your acceptance without modification of the terms, conditions and notices contained herein. Use of this Product implies acceptance of all such terms, conditions and notices. If you do not wish to accept these terms, conditions, and notices, please return the Product, unused, in its original packaging and at your own cost and risk to the relevant Customer Care Centre together with proof of purchase for a full refund.

2. Proper Use

This Product is designed for use with dogs where tracking and training are desired. The specific temperament or size/weight of your dog may not be suitable for this Product (please refer to **"HOW THE SYSTEM WORKS"** in this Operating Guide). Radio Systems Corporation recommends that this Product is not used if your dog is aggressive and accepts no liability for determining suitability in individual cases. If you are unsure whether this Product is appropriate for your dog, please consult your veterinarian or certified trainer prior to use. Proper use includes, without limitation, reviewing the entire Operating Guide and any specific safety information.

3. No Unlawful or Prohibited Use

This Product is designed for use with dogs only. This dog tracking and training device is not intended to harm, injure or provoke. Using this Product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions and notices governing this Product from time to time. If such changes have been notified to you prior to your use of this Product, they shall be binding on you as if incorporated herein.

COMPLIANCE



This equipment has been tested and found to comply with relevant R&TTE Directives. Before using this equipment outside the EU countries, check with the relevant local R&TTE authority. Unauthorised changes or modifications to the equipment that are not approved by Radio Systems Corporation are in violation of EU R&TTE regulations, could void the user's authority to operate the equipment, and void the warranty.

The Declaration of Conformity can be found at: www.sportdog.com/eu_docs.php.

IC

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate with the antennas provided with the equipment. Use of other antennas may violate Industry Canada rules and void the user's authority to operate the equipment.

ACMA

This device complies with the applicable EMC requirements specified by the ACMA (Australian Communications and Media Authority).



BATTERY DISPOSAL

⚠ WARNING

See Important Safety Information related to the battery on page 3.

This system operates on three Lithium-Ion battery packs (240mAh capacity for the Collar Receiver, 550mAh capacity for the Remote Transmitter, and 400mAh for the Remote Beeper). Only replace with battery received from calling the Customer Care Centre. For a Listing of the telephone numbers in your area, visit our website at www.sportdog.com.

Separate collection of spent batteries is required in many regions; check the regulations in your area before discarding spent batteries. Please see below for instructions on how to remove the battery from the product for separate disposal.

AT END OF PRODUCT LIFE, USE THESE BATTERY REMOVAL INSTRUCTIONS FOR FINAL DISPOSAL (DO NOT OPEN THE COLLAR RECEIVER, REMOTE BEEPER, OR REMOTE TRANSMITTER UNTIL YOU HAVE RECEIVED THE REPLACEMENT)

- Using a #1 Phillips screwdriver, remove the case screws from your Remote Beeper and Remote Transmitter.
- Using a 3/32 Allen Wrench, remove the case screws from your Collar Receiver.
- Remove the case back or cover.
- Remove the old battery pack.

⚠ WARNING

- When removing the old battery pack, care must be taken when gripping the connector firmly to avoid damaging the wires. Shorting the battery wires may cause fire or explosion.
- These instructions are not valid for repair or battery replacement. Replacing the battery with a battery not specifically approved by Radio Systems Corporation may cause fire or explosion. Please call the Customer Care Centre to avoid invalidating your warranty.



IMPORTANT RECYCLING ADVICE

Please respect the Waste Electrical and Electronic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system. Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Centre for further information. For a listing of Customer Care Centre telephone numbers, visit our website at www.sportdog.com.

WARRANTY

Three Year Non-Transferrable Limited Warranty

This Product has the benefit of a limited manufacturer's warranty. Complete details of the warranty applicable to this Product and its terms can be found at www.petsafe.net and/ or are available by contacting your local Customer Care Centre.

- Radio Systems PetSafe Europe Ltd, 2nd Floor, Elgee Building, Market Square, Dundalk, Co. Louth, Ireland
- Radio Systems Corporation, 10427 PetSafe Way, Knoxville, TN 37932 USA

Australia/New Zealand – In compliance with the Australian Consumer Law, Warranties Against Defects, effective January 1, 2012, warranty details of this Product are as follows: Radio Systems Australia Pty Ltd. (hereinafter referred to as "Radio Systems") warrants to the original retail purchaser, and not any other purchaser or subsequent owner, that its Product, when subject to normal and proper residential use, will be free from defects in material or workmanship for a period of three (3) years from the purchase date. An "original retail consumer purchaser" is a person or entity who originally purchases the Product, or a gift recipient of a new Product that is unopened and in its original packaging. When serviced by Radio Systems Customer Service, Radio Systems covers labour and parts for the first three years of ownership; after the first three years, a service or upgrade charge will apply relative to replacement of the Product with new or refurbished items at Radio Systems' sole discretion.

The limited warranty is non-transferable and shall automatically terminate if the original retail consumer purchaser resells the Radio Systems Product or transfers the property on which the Radio Systems Product is installed. This Limited Warranty excludes accidental damage due to dog chews; lightning damage; or neglect, alteration, and misuse. Consumers who purchase products outside of Australia, New Zealand, or from an unauthorised dealer will need to return the Product to the original place of purchase for any warranty issues.

Please note that Radio Systems does not provide refunds, replacements, or upgrades for change of mind, or for any other reason outside of these Warranty terms.

Claims Procedure: Any claim made under this Warranty should be made directly to Radio Systems Australia Pty Ltd. Customer Care Centre at:

Radio Systems Australia Pty Ltd.
PO Box 7266, Gold Coast Mail Centre QLD 9726, Australia
Australia Residents: 1800 786 608
New Zealand Residents: 0800 543 054
Email: info@petsafeaustralia.com.au

To file a claim, a proof of purchase must be provided. Without a proof of purchase, Radio Systems will not repair or replace faulty components. Radio Systems requests the Consumer to contact the Radio Systems Customer Care Centre to obtain a Warranty Return number, prior to sending the Product. Failure to do so may delay in the repair or replacement of the Product.

If the Product is deemed to be faulty within 30 days from date of original purchase, Radio Systems will organise for a replacement to be sent in advance of returning the faulty Product. A Post Bag will be included with the replacement Product for the return of the faulty Product. The Product must be returned within 7 days of receiving the replacement. If the Product is deemed to be faulty after 30 days from the date of original purchase, the consumer will be required to return the Product to Radio Systems at the consumer's own expense. Radio Systems will test and replace the faulty unit or its components and return to the consumer free of charge, provided the Product is within its said warranty period. This warranty is in addition to other rights and remedies available to you under the law. Radio Systems goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should you have any queries or require any further information, please contact our Customer Care Centre on 1800 786 608 (Australia) or 0800 543 054 (New Zealand).

This product is protected by the following patents:

U.S. Patent Numbers: 6,901,883; 7,017,524; 7,420,136; D573,564; 6,184,790; 6,459,378; 7,814,865; 7,647,545.

Canada Patent Number: 2565318

Australia Patent Number: 2006233255

Other Patents Pending.



SPORTDOG® ADD-A-DOG®

SPORTDOG.COM

SPORTTRAINER®

COMPATIBLE WITH SD::1875E



SD::BEEP::E



SDR::ABE

©2016 RADIO SYSTEMS CORPORATION

Radio Systems Corporation • 10427 PetSafe Way • Knoxville, TN 37932 USA • 865.777.5404

Radio Systems PetSafe Europe Ltd • 2nd Floor, Elgee Building, Market Square

Dundalk, Co. Louth, Ireland • +353 (0) 42 942 1811

400-1624/1

