

ADD-A-BEEPER®

SD:  
BEEPER



**OPERATING GUIDE**  
PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING

# IMPORTANT SAFETY INFORMATION

## Explanation of Attention Words and Symbols used in this guide

---



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **⚠️ WARNING**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### **⚠️ WARNING**

- Not for use with aggressive dogs. Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.
- This device contains a Lithium-Ion (Li-Ion) battery; never incinerate, puncture, deform, short-circuit, or charge with an inappropriate charger. Fire, explosion, property damage, or bodily harm may occur if this warning is not followed.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used battery according to the instructions.

Thank you for choosing SportDOG Brand.® Used properly, this product will help you track your dog efficiently and safely. To ensure your satisfaction, please review this owner's manual thoroughly. If you have questions regarding this product's operation, please see this manual's Frequently Asked Questions or Troubleshooting section, contact our Customer Care Center at 1-800-732-0144, or visit our website at [www.sportdog.com](http://www.sportdog.com).

 
To get the most protection out of your warranty, please register your product within 30 days at [www.sportdog.com](http://www.sportdog.com). By registering, and keeping your receipt you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, SportDOG™ will never give or sell your valuable information to anyone. Complete warranty information is available online at [www.sportdog.com](http://www.sportdog.com).

## TABLE OF CONTENTS

KEY DEFINITIONS .....	4
PREPARE THE REMOTE BEEPER .....	5
FIT THE REMOTE BEEPER .....	7
MATCH THE REMOTE BEEPER (SD-1875, SD-1825, SD-1825CAMO, SD-2525) .....	8
MANUALLY CONFIGURE REMOTE BEEPER .....	8-9
CHANGE TONE	
CHANGE RUN MODE	
ACCESSORIES .....	10
FREQUENTLY ASKED QUESTIONS .....	11
TROUBLESHOOTING .....	12
TERMS OF USE AND LIMITATION OF LIABILITY .....	13
FCC COMPLIANCE .....	14
BATTERY DISPOSAL .....	15
SPORTDOG™ ADD-A-DOG® RECEIVER/REMOTE BEEPER .....	16

# KEY DEFINITIONS

## REMOTE BEEPER

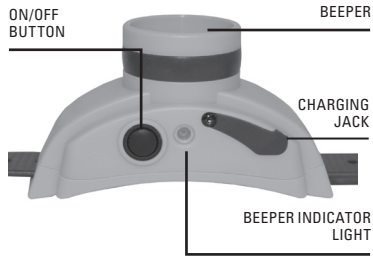

**REMOTE BEEPER:** Receives the radio signal from the Remote Transmitter and beeps with a tone and frequency set by the user. It is waterproof and can be submerged in water to a depth of 25 feet.

**ON/OFF BUTTON:** Turns the beeper on and off. The Remote Beeper's functions can be disabled from the Remote Transmitter, but the Remote Beeper should be turned off using this button when not in use to conserve battery life.

**INDICATOR LIGHT:** Indicates when the Remote Beeper has been turned on or off and also serves as a low-battery indicator.

**BEEPER:** The point at which the sound is produced.

**CHARGING JACK:** For connecting the charger. Although the Remote Beeper is waterproof without it, keep the cover in place when not charging to keep debris out of the opening.

## STEP :: 01

# PREPARE THE REMOTE BEEPER

## CHARGE THE REMOTE BEEPER

1. Lift the rubber cover protecting the Charging Jack.
2. Connect accessory cable to cradle and Remote Beeper.
3. Plug the charger into a standard 120/240-volt AC wall outlet.
4. Charge the Remote Beeper for 2 hours for the first charge and every charge thereafter.



**Using Li-Ion technology, the Remote Beeper only requires a 2 hour charge. It is not harmful to let the unit charge for more than 2 hours.**

5. When charging is complete, replace the rubber cover.

*NOTE: Approximate battery life between charges is 60-80 hours, depending on frequency of use.*

## TURN THE REMOTE BEEPER ON

Press and release the On/Off Button. The Remote Beeper Indicator Light will come on and the Remote Beeper will beep 1 time.

## TURN THE REMOTE BEEPER OFF

Press and release the On/Off Button. The Remote Beeper Indicator Light will come on solid (red) and the Remote Beeper will beep for 1 second.

## REMOTE BEEPER INDICATOR LIGHT

REMOTE BEEPER FUNCTION	LIGHT COLOR	LIGHT FUNCTION	BATTERY STATUS
Unit is on	Green	Light flashes every 3 seconds	Good
Unit is on	Red	Light flashes every 3 seconds	Low
Unit is turned on via On/Off Button	Green	Light is solid in color during beep sequence	N/A
Unit is turned off via On/Off Button	Red	Light is solid in color during beep sequence	N/A
Unit is charging	Green	Light is solid in color	N/A
Unit is fully charged	Green	Light flashes every second	N/A

### RECHARGEABLE BATTERIES

#### ⚠WARNING

 
 
 
- This device contains a Lithium-Ion (Li-Ion) battery; never incinerate, puncture, deform, short-circuit, or charge with an inappropriate charger. Fire, explosion, property damage, or bodily harm may occur if this warning is not followed.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used battery according to the instructions (see page 15).
- Battery should never be removed from the battery compartment for charging.
- Risk of explosion if battery is charged in areas with high temperature (100° F+).
- Rechargeable Lithium Ion (Li-Ion) batteries are not memory sensitive, do not require depletion before charging and cannot be over charged.
- The battery comes partially charged from the factory, but will require a full charge before the first use.
- **When storing the unit for long periods, remember to regularly give battery a full charge. This should be done once every 3 to 4 months.**
- You should expect hundreds of recharge cycles from your battery. However, all rechargeable batteries lose capacity over time relative to the number of recharge cycles they experience. This is normal. If your operating time drops to half of the original life, contact the Customer Care Center to purchase a new battery.
- The battery should last for a period of 3-5 years. When a battery needs replacement, you can order a new pack by calling our Customer Care Center at 1-800-732-0144. Please do not open the Remote Beeper until you have received the replacement.

## STEP :: 02

## FIT THE REMOTE BEEPER

To ensure a proper fit, follow these steps:

1. Thread the end of the collar strap through the slot in the Remote Beeper and then through the slot on the opposite side of the Remote Beeper. Slide the Remote Beeper a few more inches up the collar strap. The knob located on the bottom of the Remote Beeper can be placed in one of the collar strap holes to prevent sliding and to ensure it remains in place properly.
2. With your dog standing (2A), place the collar strap around the narrowest part of your dog's neck. The Remote Beeper should be centered behind the dog's head (2B). The Remote Beeper may shift due to movement if not being used with a Collar Receiver.
3. The collar strap should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (2C).
4. Allow your dog to wear the collar for several minutes, and then recheck the fit. Check the fit again as your dog becomes more comfortable wearing the Remote Beeper.

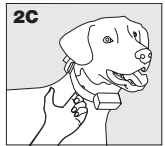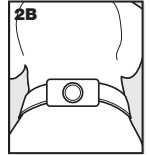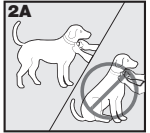

## MATCH THE REMOTE BEEPER

To match the Remote Beeper to work with a new Remote Transmitter or to reprogram a new Remote Beeper to work with your existing Remote Transmitter (SD-1875, SD-1825, SD-1825CAMO, SD-2525):

- Check to make sure the Remote Beeper is off.
- Press and hold the On/Off Button. The Remote Beeper Indicator Light will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Remote Beeper Indicator Light will begin flashing as normal. If this occurs, start over from **A**.
- After the Remote Beeper Indicator Light has turned off, release the On/Off Button.
- Press and hold the Upper Button on the Remote Transmitter until the Remote Beeper Indicator Light flashes 5 times. Once the Remote Beeper Indicator Light has flashed 5 times, the Remote Beeper has been matched and will begin flashing as normal. If the Remote Beeper Indicator Light does not flash 5 times, start over from **A**.

*NOTE: For more information on programming modes, please consult the original Operating Guide that came with your SD-1875, SD-1825, SD-1825CAMO or SD-2525 system; or visit our website to download a manual at [www.sportdog.com](http://www.sportdog.com).*

## MANUALLY CONFIGURE REMOTE BEEPER

### SET TONE AND RUN MODE

While the Remote Beeper can be remotely programmed from the Remote Transmitter, you can also set tone and run mode from the beeper itself.

- Turn the Remote Beeper off.
- Press and release the On/Off button to turn on the Remote Beeper.
- Within 5 seconds press and hold the On/Off button. The Remote Beeper will begin to cycle through available tones found on the following page.

MODE	STONE
1	High Volume Beep
2	Double High Beep
3	High Falling To Low Volume Beep
4	Double High Falling To Low Volume Beep
5	Low Volume Hawk
6	High Volume Hawk
7	Bob White Quail Call
8	Triple Beep
9	Low Volume Beep

- When the desired tone is heard, release the button before the next tone starts. Tone is now set.
- Press and hold the button immediately following tone selection completion until the number of beeps matches the desired run mode as shown in the chart below.

1 Beep (Silent)	No beep when dog is running/Beeps once per second when dog is on point
2 Beeps (5 second)	Beeps every 5 seconds when dog is running/Beeps once per second when dog is on point
3 Beeps (10 second)	Beeps every 10 seconds when dog is running/Beeps once per second when dog is on point

- Release the button after the corresponding number of beeps matches your desired run mode.

### LOCATING YOUR DOG IN THE FIELD USING A REMOTE TRANSMITTER

Anytime your dog is within one mile (two miles if using SD-2525 Remote Transmitter), you can make the Remote Beeper beep by pressing the Locate Button on the Remote Transmitter. The Remote Beeper will beep once each time you press the button. Pressing the Locate Button disables the Remote Beeper's run mode, but it is still on. To reactivate the run mode, press and release the UplandHunter® 1875 Remote Transmitter's Run Mode button. To reactivate the run mode on SD-1825, SD-1825CAMO or SD-2525 models, press and hold the Remote Transmitter's Locate Button. The Remote Beeper will emit 3 beeps to confirm run mode has been activated and will continue operating in the last run mode in which it was set.

## ACCESSORIES

To purchase additional accessories for your SportDOG Brand® UplandHunter® Add-A-Beeper®, contact the Customer Care Center at 1-800-732-0144 or visit our website at [www.sportdog.com](http://www.sportdog.com) to locate a retailer near you.

Component	Part Number
¾" Grey Collar Strap	SAC00-13864
¾" Blaze Orange Collar Strap	SAC00-10815
¾" Black Collar Strap	SAC00-10816
Remote Beeper (does not include collar strap)	SDT00-13820
Adaptor (for Remote Beeper only)	SAC00-13736
Battery Kit (Remote Beeper)	SAC00-13794
SD-1875 Accessory Kit (includes belt clip, lanyard, power plug covers for Remote Transmitter and Remote Beeper, rubber band for Remote Beeper)	SAC00-13823

## FREQUENTLY ASKED QUESTIONS

<b>Can I program my Remote Beeper to work with my other SportDOG Brand® systems?</b>	The Remote Beeper will work with SD-1875, SD-1825, SD-1825CAMO and SD-2525 systems.
<b>Can I use the Remote Beeper by itself?</b>	Yes, the Remote Beeper can be used independently without the Collar Receiver. However, it is recommended to have a counter weight, like the Collar Receiver, in order to keep the Remote Beeper on top of the dog's neck.
<b>What is the range of the Remote Beeper?</b>	The Remote Beeper produces a tone that can be heard up to 500 yards. When matched with a SD-1875, SD-1825 or SD-1825CAMO Remote Transmitter, the Remote Beeper has a range of one mile. Range can be affected by terrain, weather, vegetation and transmission from other radio devices.

## TROUBLESHOOTING

The answers to these questions should help you solve any problem you have with this system. If they do not, please contact the Customer Care Center at 1-800-732-0144 or visit our website at [www.sportdog.com](http://www.sportdog.com).

**My Remote Beeper does not beep when the dog is moving or when he is on point.**

- Check to see if the Remote Beeper has been turned on and the Indicator Light is flashing.
- Refer to “Manually Configure Remote Beeper.”
- If the Locate Button on your Remote Transmitter was pressed, then this will disable Remote Beeper’s Run Mode.
- To enable the Remote Beeper’s Run Mode, press the Remote Transmitter’s Run Mode button. If your Remote Transmitter does not have a Run Mode button, press and hold your Locate Button for 3 seconds. The Remote Beeper will emit 3 beeps to confirm run mode has been reactivated.

**The Remote Beeper is not responding to the Remote Transmitter.**

- Verify the Remote Beeper has been turned on and the Indicator Light is flashing. Refer to “Turning the Remote Beeper On and Off”.
- Verify the toggle switch on your Remote Transmitter is in the correct position.
- Refer to “Match the Remote Beeper.”

**My Remote Beeper cannot be matched.**

- Verify the Remote Beeper has been turned on and the Indicator Light is flashing. Refer to “Turning the Remote Beeper On and Off”.
- Refer to “Match the Remote Beeper.”  
*Note: Only the Upper Button on your Remote Transmitter can be used to match the Remote Beeper.*

**The Remote Beeper cannot be programmed with the Tone or Run Mode.**

- Follow the directions on page 8.  
*Note: After the tone has been programmed, the On/Off button needs to be immediately pressed and held in order to select the desired run mode.*

## TERMS OF USE AND LIMITATION OF LIABILITY

### 1. TERMS OF USE

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions and notices contained herein. Usage of this Product implies acceptance of all such terms, conditions, and notices.

### 2. PROPER USE

This Product is designed for use with dogs where tracking is desired. The specific temperament of your dog may not work with this Product. We recommend that you not use this Product if your dog is less than 8 pounds or if your dog is aggressive. If you are unsure whether this is appropriate for your dog, please consult your veterinarian, certified trainer or contact our Customer Care Center at 1-800-732-0144.

Proper use includes reviewing the entire Operating Guide provided with your Product and any specific Caution statements.

### 3. NO UNLAWFUL OR PROHIBITED USE

This Product is designed for use with dogs only. This dog training device is not intended to harm, injure, or provoke. Using this Product in a way that is not intended could result in violation of Federal, State or local laws.

### 4. LIMITATION OF LIABILITY

In no event shall Radio Systems® Corporation be liable for any direct, indirect, punitive, incidental, special or consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product. Buyer assumes all risks and liability from the use of this Product.

### 5. MODIFICATION OF TERMS AND CONDITIONS

Radio Systems Corporation reserves the right to change the terms, conditions and notices under which this Product is offered.



## FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Contact customer service or an experienced radio/TV technician for assistance.

Caution: Unauthorized changes or modifications to the equipment may violate FCC regulations and could void the user's authority to operate the equipment.

## IC - CANADA

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**Customer Care Center / Service clientèle**  
800-732-2677

Monday - Friday / Lundi - Vendredi  
8 am - 8 pm / 8h00 - 20h00  
Saturday / Samedi  
9 am - 5 pm / 9h00 - 17h00



## BATTERY DISPOSAL

**WARNING** See important safety information on page 2 related to the battery.

This system operates on one Li-Ion battery pack (400mAh for the Remote Beeper). Only replace with battery received from calling the Customer Care Center at 1-800-732-0144.

Separate collection of spent batteries is required in many regions; check the regulations in your area before discarding spent batteries. Please see below for instructions on how to remove the battery from the product for separate disposal. If you wish to ship us your spent batteries for disposal, contact the Customer Care Center.

**AT END OF PRODUCT LIFE, USE THESE BATTERY REMOVAL INSTRUCTIONS FOR FINAL DISPOSAL (DO NOT OPEN THE REMOTE BEEPER UNTIL YOU HAVE RECEIVED THE REPLACEMENT):**

- Using a #1 Phillips screwdriver for your Remote Beeper remove the case screws.
- Remove the case back or cover.
- Remove the old battery pack. *NOTE: When removing the old battery pack, care must be taken when gripping the connector firmly to avoid damaging the wires. Shorting the battery wires may cause fire or explosion.*

*NOTE: These instructions are not valid for repair or battery replacement. Replacing the battery with a battery not specifically approved by Radio Systems® Corporation may cause fire or explosion. Please call the Customer Care Center at 1-800-732-0144 to avoid invalidating your warranty.*

This product is protected by the following patents:  
For use under U.S. Patent No. 7,814,865





[SPORTDOG.COM](http://SPORTDOG.COM)

**SPORTDOG / ADD-A-DOG®**  
*Collar Receiver/Remote Beeper*



**UPLANDHUNTER®**  
**SDR::BEEP REMOTE BEEPER**

**UPLANDHUNTER®**  
**SDR::AB ADD-A-DOG®**



NOTE: SDR-FS, SDR-FH, SDR, SDR-CH, SDR-FC, SDR-BEEP AND SDR-H ADD-A-DOG COLLARS ARE NOT COMPATIBLE WITH THIS SYSTEM.  
SDR-A, SDR-AW AND SDR-AH ADD-A-DOG COLLARS ARE COMPATIBLE WITH THIS SYSTEM.